


Web-based ONLINE VISUALISATION AIRLEADER Master II+ an Master-4

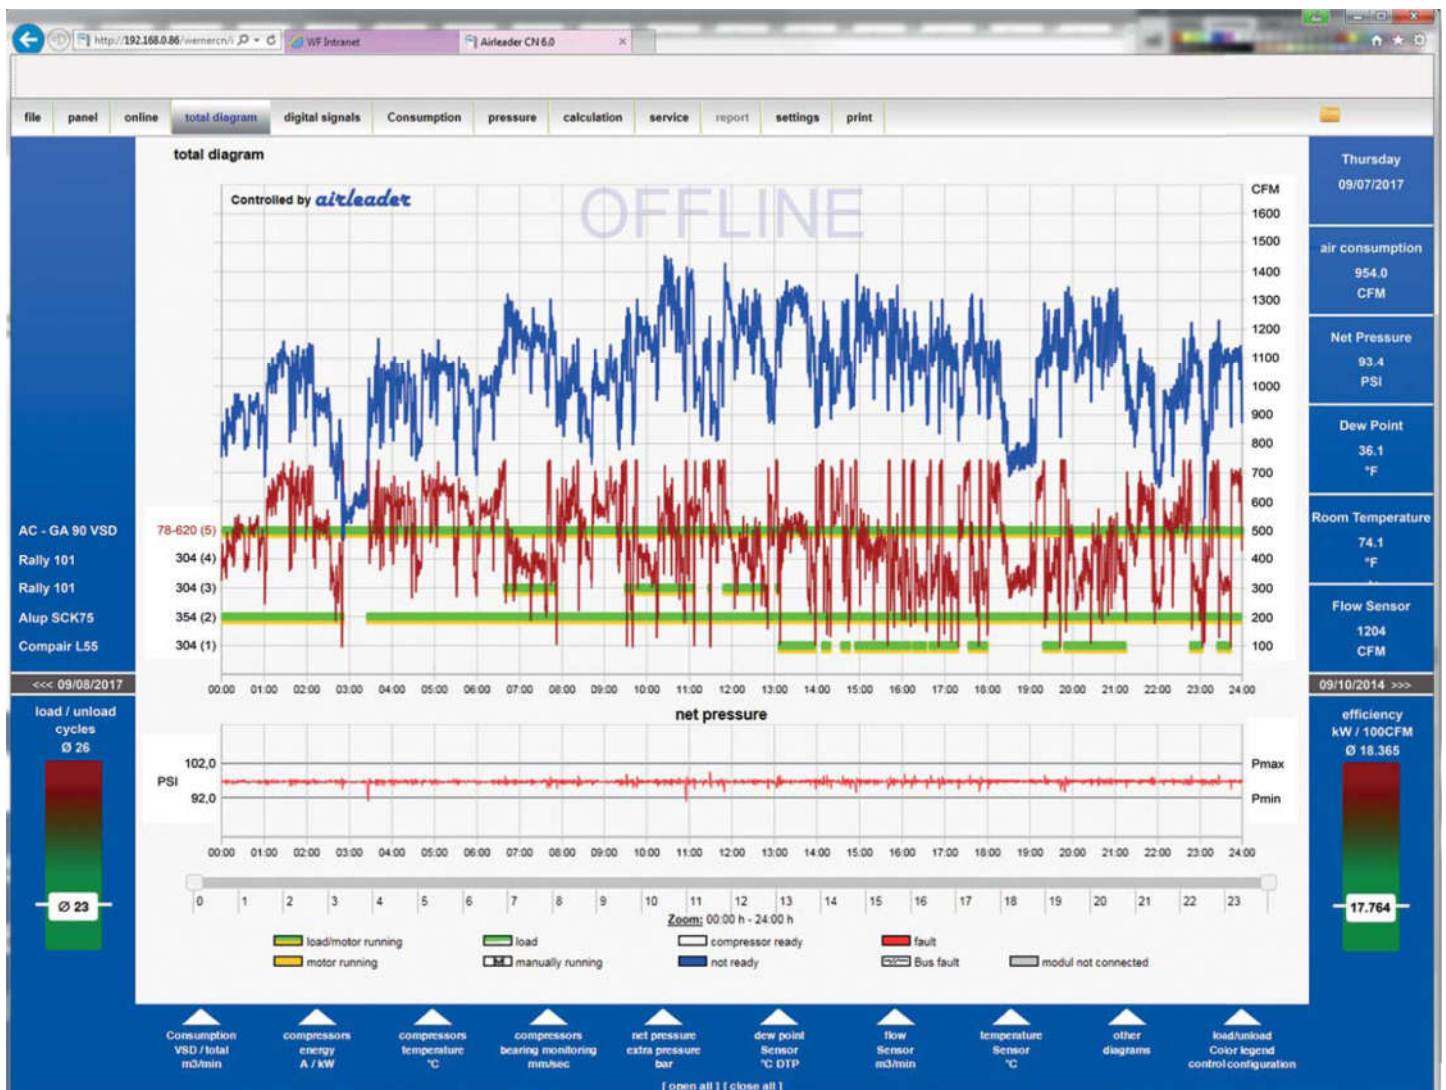

Operation manual 4.000
Dated 08/2022

Table of Content

WEB-Server ONLINE Visualization

Page 2	Table of Content
Page 3	IP-Address, Network and factory settings
Page 4	Installation Web Server
Page 5	Define Data Directory
Page 6	User interface
Page 7	OFFLINE Evaluations
Page 8	Selection of various diagrams
Page 9	Energy Calculation, Service und Alarm report
Page 10	Basic Settings
Page 11	Analog Inputs on the Master Module
Page 12	Connected devises to Connection Module (DATA Module) 17-24
Page 13	General Settings
Page 14	Login and Remote Control
Page 15	Server Settings
Page 16	Configurations Table 1
Page 17	Configurations Table 2
Page 18	Generate Data Archive


IP-address, Network and factory settings

IP-address settings: Touch: > Program > Network

- > set IP-address
- > set Subnet Mask
- > set Standard Gateway

If compressors are connected over COM-Server with separate IP-address

go to > Factory settings: Touch > Program > Factory setting

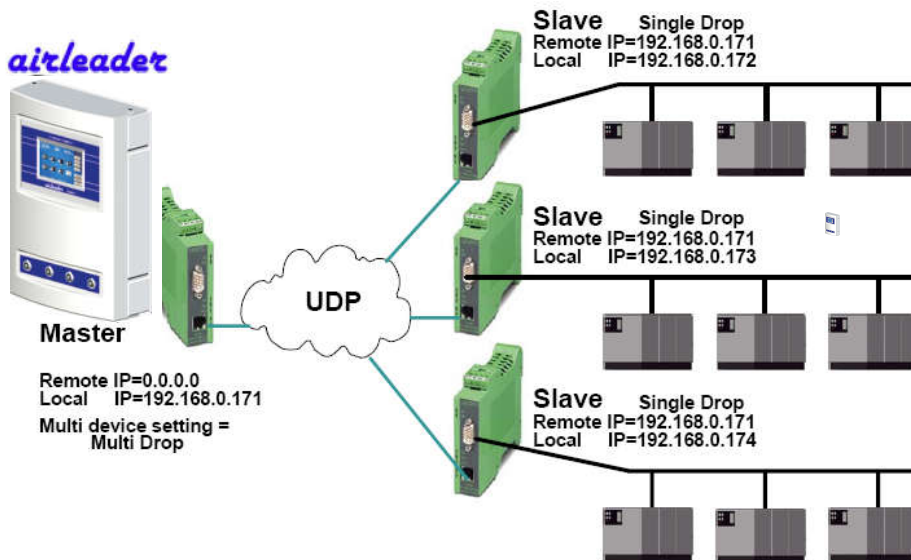

Communication via Ethernet

The connection between AIRLEADER and the connection modules for compressors and other components can be done via the Ethernet by using the COM server.

The RS-485 interface AIRLEADER is connected to a COM server.

The COM server gets an IP address that matches the IP address range.

More COM-server can be connected to the Ethernet with different IP addresses.

Program waiting time for slave response

ENTER CODE „111111“ than „OK“

Program waiting time to „200 ms“

If necessary changeable up to 250 ms

Installation Web Server

System requirements:

Server:

Intel Pentium from 2.2 Ghz min. 512 MB RAM.— System Windows 2000, 2003, NT, XP, Linux with X-Server Library

Client:

Microsoft Internet Explorer from 5.5

Installation:

Run Setup and follow the instructions. At the end of installation, choose whether to install and start the web-server service immediately; this is recommended. The service starts automatically with Windows and records Airleader data in the background. Internet Explorer then opens the configuration instructions.

Note: The first page request may arrive before the logging service has started. If an error appears, wait a few seconds and click Refresh in Internet Explorer.

Step 1: Name the station


The configuration of your station start. Intend a name for your compresses air station. From now this name is the offset name of the web address where you reach your station later.

The name may not include any empty or special sign.

Step 2: choosing a data directory


- Select data directory.
- Click Button „select directory“
- Select a fixed directory.

Define Data Directory

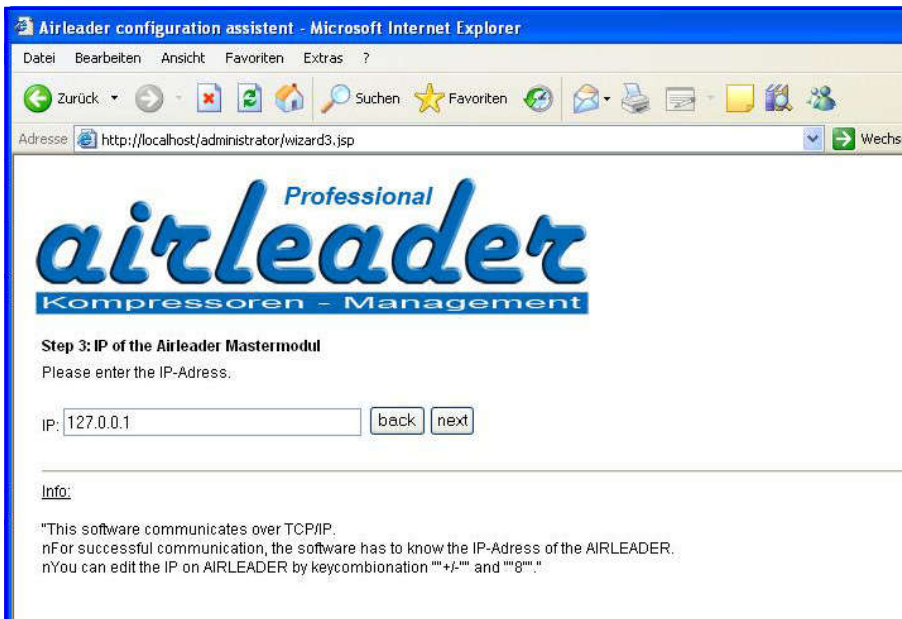

Step 3: Airleader IP address
Enter the IP address of the Airleader master module, then click Next. Creating the station may take a few minutes.


After basic configuration

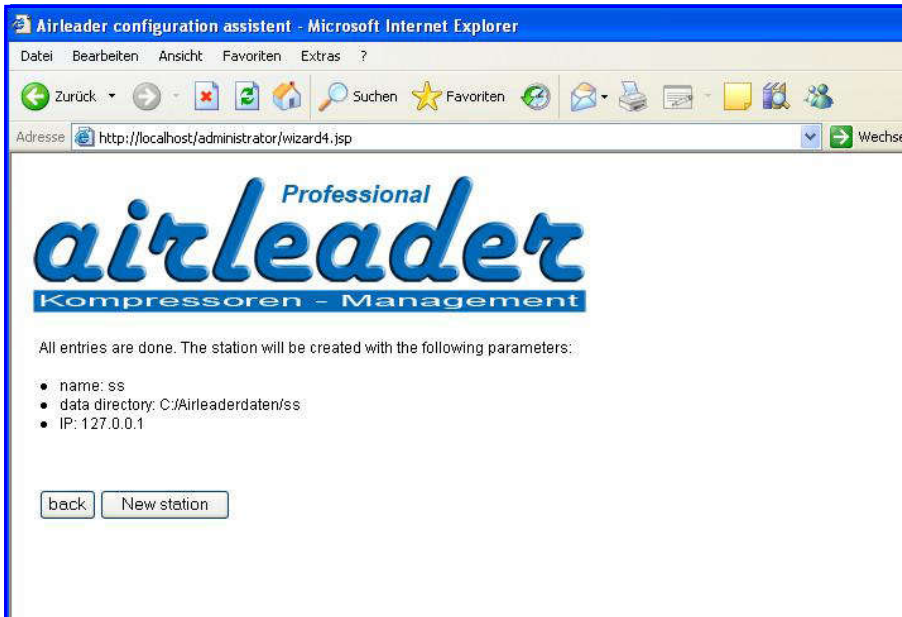

the online visualization in the background load down the already stored day files
If all file are stores the visualization goes „ONLINE“

If Airleader


was in operation some time before the Web-Server Software was connected, the configuration should be manually loaded from the master module.

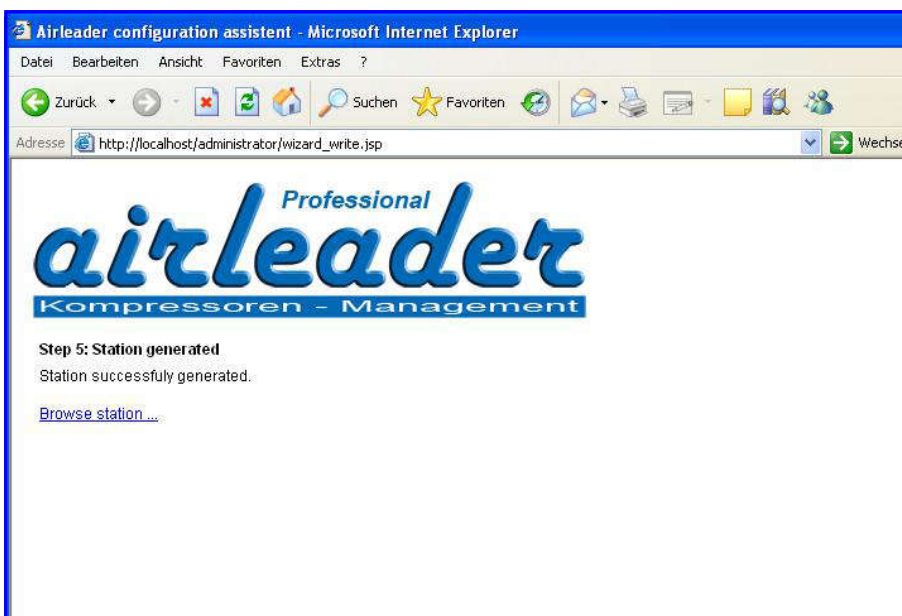


Under „Settings/remote control“
Load configuration from the Airleader master module

According to this process the software is synchronized now

User Interface

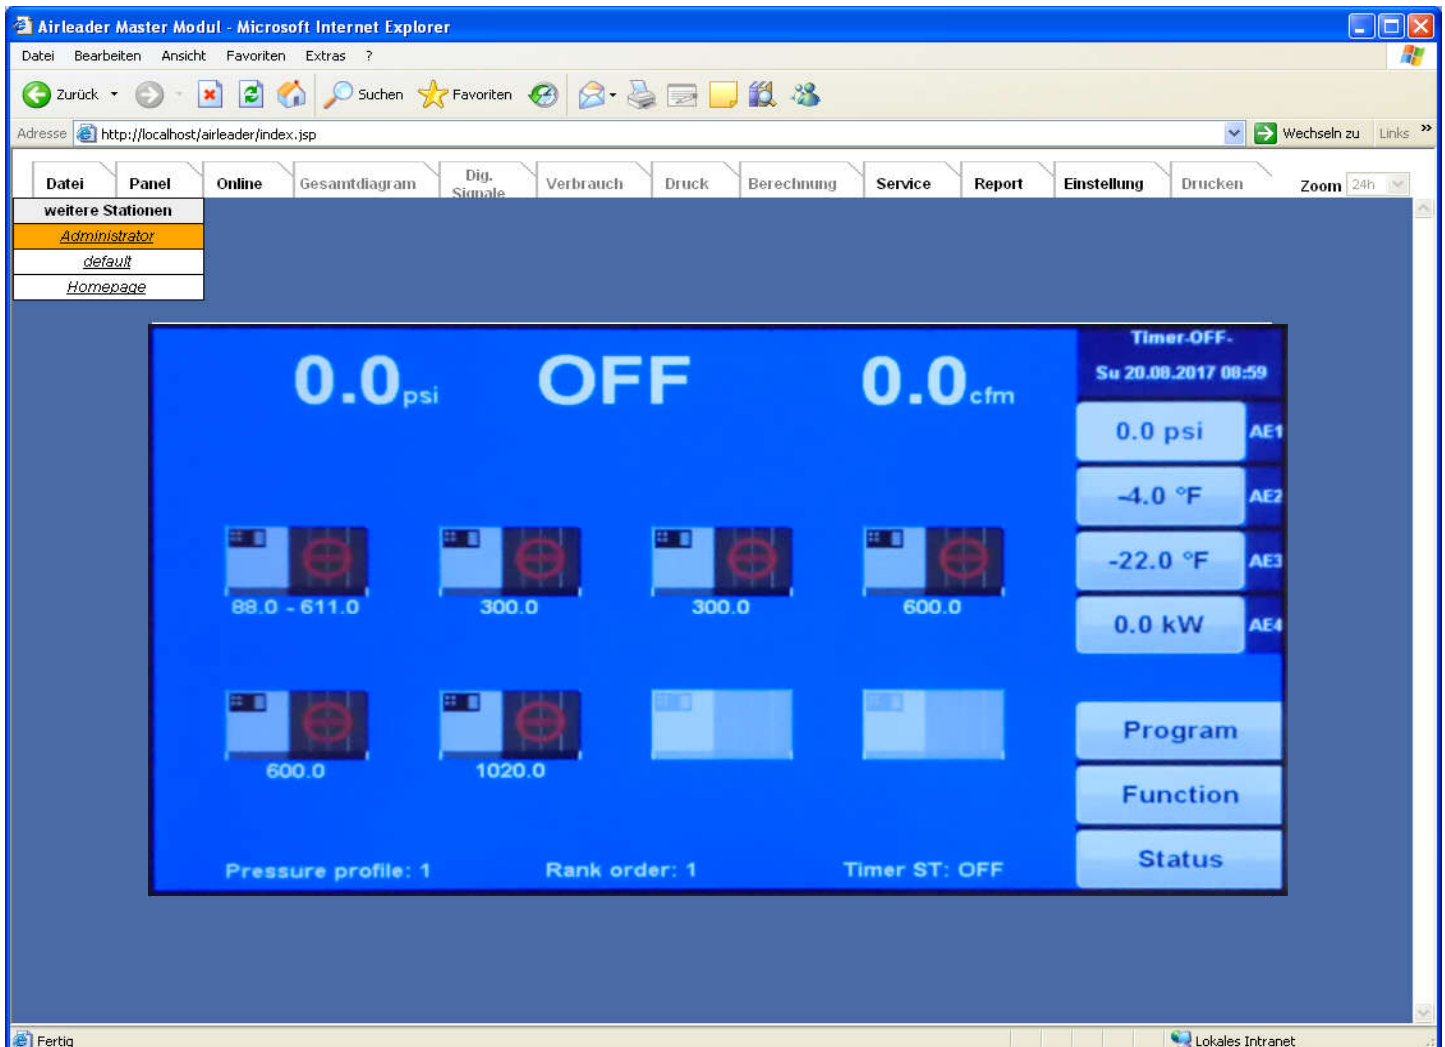

The AIRLEADER Web servers visualization has a card rider system for the basic functions. The possible respectively currently options are active (black dialable), The online visualization shows the status of the compressed air station in real time. Fault or service messages are distributed directly here.

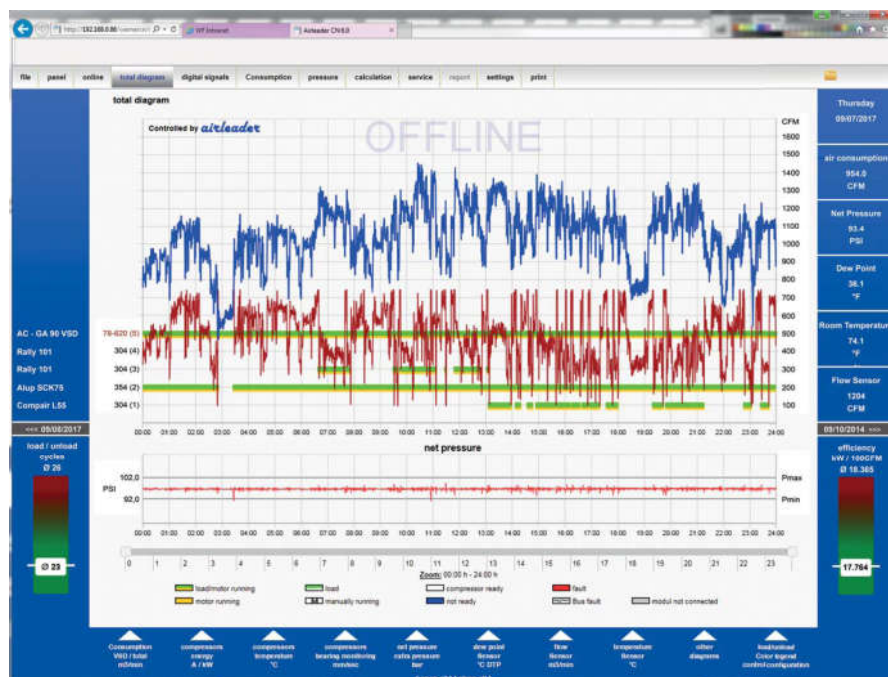

OFFLINE Evaluations

Click „Open file:

You get an overview of the saved data of the last months

Select month:

daily data files can be selected

Weekly data:

the files of the week are completely ready with daily air consumption and energy calculation


Monthly data

the monthly files are completely ready with daily air consumption and energy calculation

Close


The ONLINE or OFFLINE visualization will be closed.

It can take some seconds before open the diagram by selecting of several days together, because the data has to be transported over the computer network.

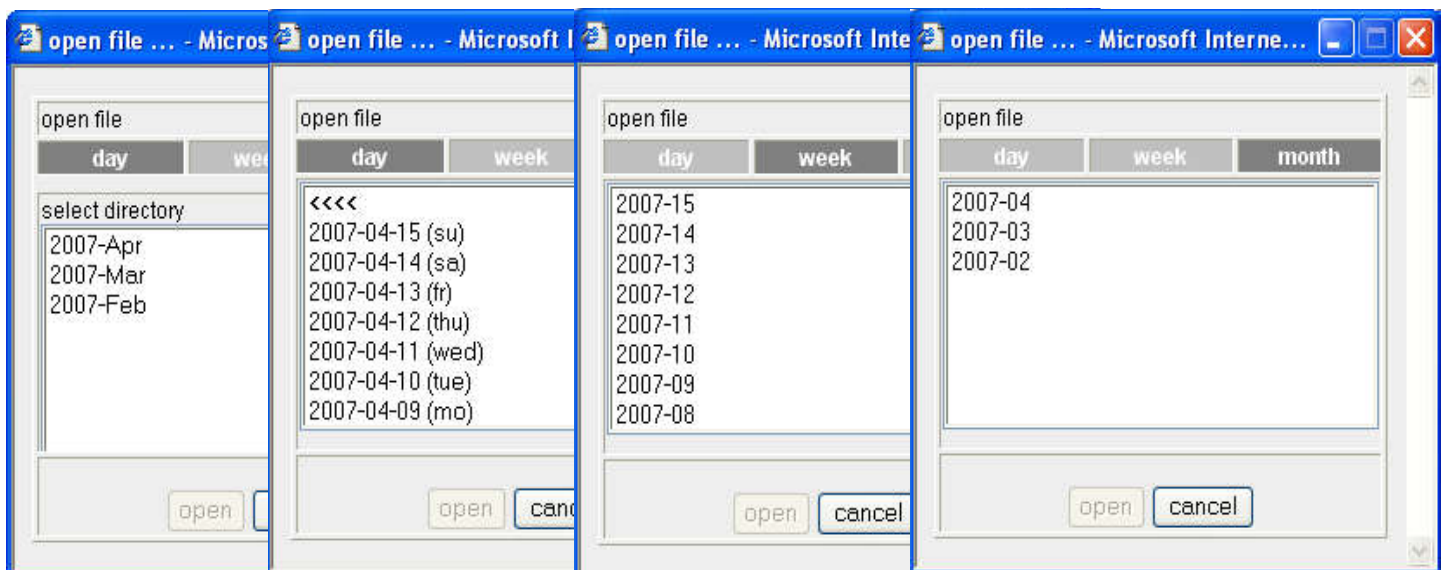


Shows the compressor status

- net pressure
- air consumption
- Connected sensors
- Over the selected time

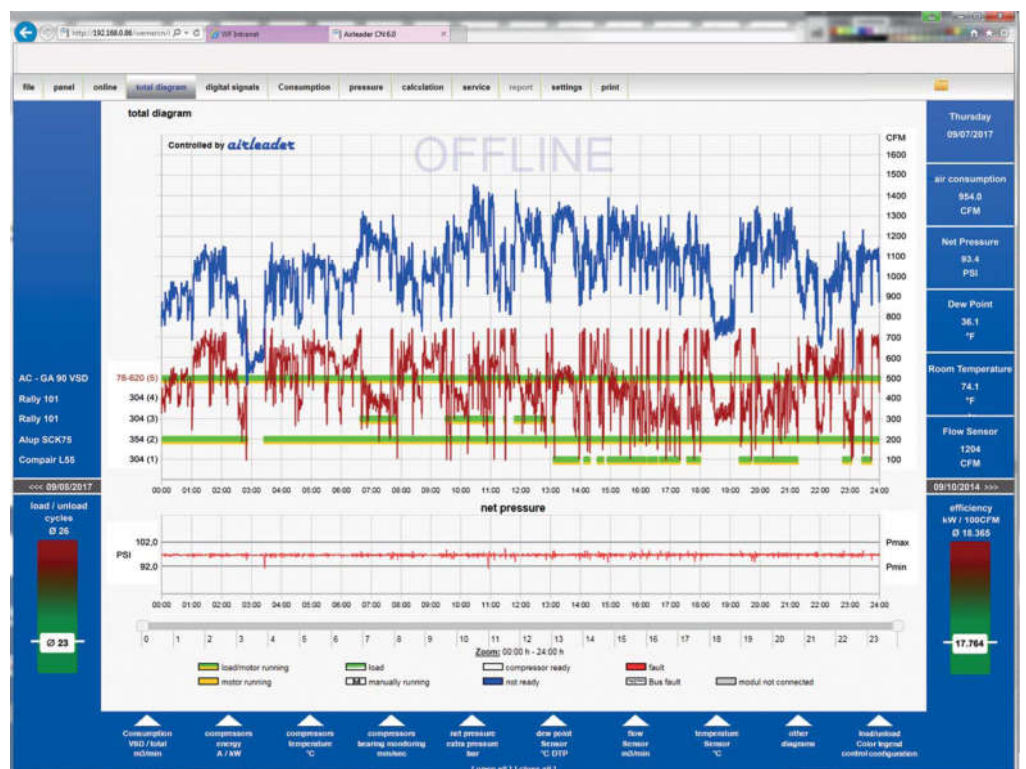

Selection of various Diagrams

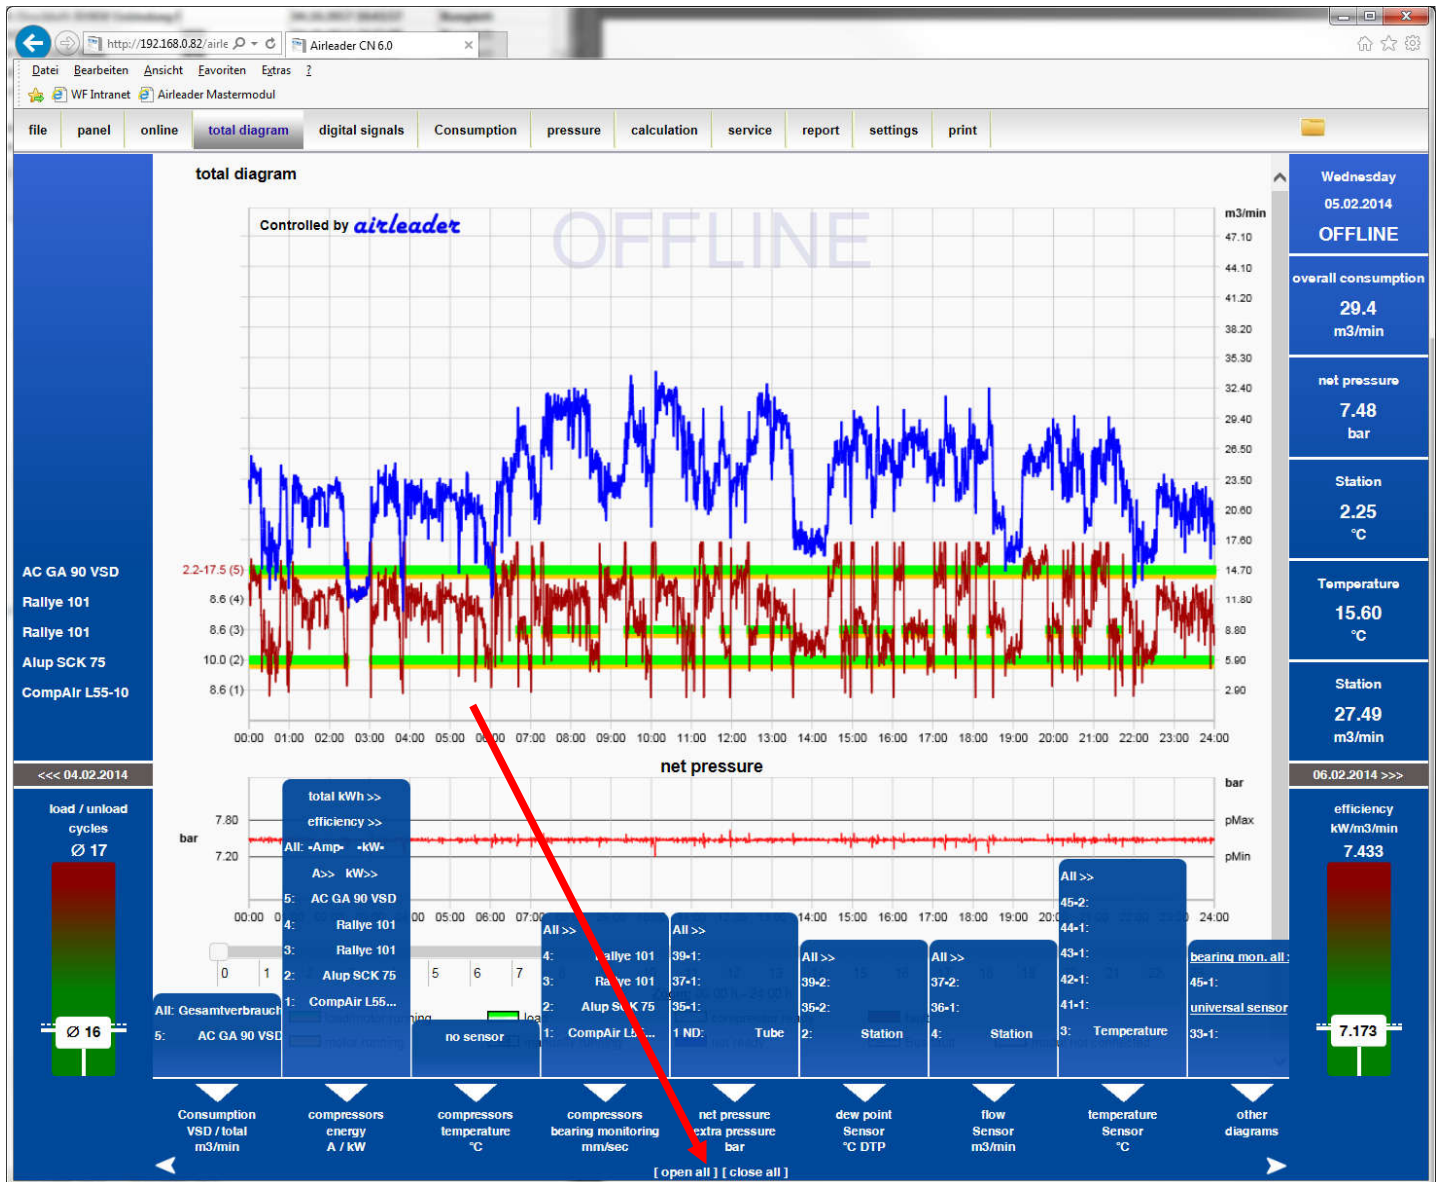

Basic settings

The compressor data

are managed in this menu. If some adjustments was changed on the AIRLEADER master the Web-Server will take this values automatically.

Compressor performance data:

Load kW, - unload kW must be entered manually to the energy calculation

If a current measurement (A)

is connected
- Motor kW
- motor voltage
- load cos phi
- unload cos phi
be added to the energy calculation The delay time of alarm is manually

If a kW measurement

is connected to the Values calculated automatically.
The delay time of alarm has to be set manually.

Load and no-load values

be "calculated parameters" by clicking on the button automatically calculates

Analog input on Airleader Master Module

file panel online total diagram digital signals Consumption pressure calculation service report **settings** print

compressor modules: **master analog input** analog module digital signals general control remote control user Logout

application

AE1 net pressure P [4mA] P [20mA] pMin Pmax []
 name of device: net pressure visible pressure profil
 Alarm (Click Webserver Plus) min limited value max limited value Fax 1 Fax 2 SMS 1 SMS 2 EMail 1 EMail 2

AE2 dew point Tmin Tmax Amin Amax []
 name of device: dewpoint compressor room
 Alarm (Click Webserver Plus) min limited value max limited value Fax 1 Fax 2 SMS 1 SMS 2 EMail 1 EMail 2

AE3 temperature Tmin Tmax Amin Amax []
 name of device: room temperature
 Alarm (Click Webserver Plus) min limited value max limited value Fax 1 Fax 2 SMS 1 SMS 2 EMail 1 EMail 2

AE4 no sensor
 name of device:
 Alarm (Click Webserver Plus) min limited value max limited value Fax 1 Fax 2 SMS 1 SMS 2 EMail 1 EMail 2

save

Device name
Enter manually

visible pressure profil

pMin	0,00 [bar]
pMax	0,00 [bar]

save close

Pressure profile zooming

Analog inputs on Master
with 4-20mA Signal:

- AE1 - control pressure

- AE2 + AE3 + AE4

Can use the following sensors

- dewpoint
- extra pressure
- temperature
- flow
- current measuring
- energy measuring

The front display

Shows the values of the connected sensors

Connected devices to module 17-24 (Data module)

The connection module (17-24)
has following inputs and outputs:

- 2 Analog inputs 4-20 mA
- 3 Digital inputs
- 2 Digital outputs
- 1 Analog output 4-20 mA

The Analog inputs

for external Sensor can be freely
assigned on AIRLEADER

To all analog inputs

various analog sensors can be
connected either way. Each
measuring point can be named freely.

Alarm limits

within the sensor values can be set
free, when necessary

Alarm and Service Management (Option Web-Server-Plus)

Sends fault and service notifications
as

- E-Mail
- SMS
- Fax

Alarm limits

Can be defined freely

Digital inputs:

are fault or status messages from dryers, filters, condensate drains, etc. Each input can be named freely.

Alarms:

can be assigned individually configured for each input

The Digital outputs

provide for each analog input an output for external alarms

General Settings

file	panel	online	total diagram	digital signals	Consumption	pressure	calculation	service	report	settings	print
compressor modules	master analog input	analog module	digital signals	general	control	remote control	user	Logout			
units											
unit pressure	bar	unit power	m3/min	unit current	A	unit energy	kW	unit temperature	°C		
currency	€	price / kWh	0,12	max consumption scale	0,00	m3/min					
ethernet settings and language											
IP-address	192.168.178.184										
subnet mask	255.255.255.0										
standart gateway	192.168.178.254										
MAC address	00.50.C2.99.87.BB										
language	english										
dial-in (Option Webserver Plus)											
	dial-in 1	dial-in 2	dial-in 3								
Fax 1											
Fax 2											
SMS 1											
SMS 2											
Email 1											
Email 2											
alert delay times for:											
	compressor	30	seconds								
	fault	30	seconds								
	analog inputs	30	seconds								
	compressor module	30	seconds								
	analog inputs	30	seconds								
	controller	30	seconds								
	analog inputs	30	seconds								
	analogmodule	30	seconds								
	digital inputs	30	seconds								
	analogmodule	30	seconds								
OPTION: Only with Web-Server-Plus available											
customer	Siemens										
confirmation of message	siemens@airleader.de										

Settings:

pressure = bar
 capacity = m³/min
 current = Current
 Energy = kW
 Temperature = °C
 currency = EURO
 price/kWh = 0,11
 language = english

Communication settings

for Service und Alarm-messages are only activ with option:

Web-Server-Plus

Confirmation of message

Is in this field an e-mail address entered, the file from the previous day will be send to this e-Mail (Setting the SMTP-Server)

file	panel	online	total diagram	digital signals	Consumption	pressure	calculation	service	report	settings	print					
compressor modules	master analog input	analog module	digital signals	general	control	remote control	user	Logout								
control parameter (RemoteControl Option Webserver Plus)																
delay time	minute	second														
start	0	30														
below	0	20														
high	0	20														
security zone	bar															
below	0,20															
high	0,20															
pressure profile																
pressure switch points	pMin	pMax	pAlarm													
DP 1	6,20	6,70	5,60													
DP 2	6,20	6,70	5,60													
DP 3	6,20	6,70	5,60													
DP 4	6,20	6,70	5,60													
rank profiles																
	compressor															
rank profile	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
1	1	2	2	2	2	1	1	1	1	1	1	1	1	1	1	1
2	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
3	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
4	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
compressor-sequence time																
compressors	m3/min					hour		minute								
with	28,30					04		00								
compressors	m3/min					hour		minute								
with	15,20					04		00								
clock relay																
SP	day of week						time (h/min)	on/off	DP	RF	R1	R2				
1	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday	Sunday	00	00	on	1	1	on	on	on	on
											off	off	off	off	off	off

Control parameter

This menu displays the following data

- Delay times
- Security zone
- Pressure profiles
- Rank profiles
- Compressor changing times
- Settings of real time clock

Remoteprogramming

Will be only activ with the option:

Web-Server-Plus

Login and Remote Control

file	panel	online	total diagram	digital signals	Consumption	pressure	calculation	service	report	settings	print
------	-------	--------	---------------	-----------------	-------------	----------	-------------	---------	--------	----------	-------

Username:

Password: ← airleader

As an introduction to internal settings and remote control of the web server you have to login. On "Settings" - "Login" with the default password "AIRLEADER" for username and password

file	panel	online	total diagram	digital signals	Consumption	pressure	calculation	service	report	settings	print
------	-------	--------	---------------	-----------------	-------------	----------	-------------	---------	--------	----------	-------

compressor modules	master analog input	analog module	digital signals	general	control	remote control	user	Logout
--------------------	---------------------	---------------	-----------------	---------	---------	----------------	------	--------

user	role		
airleader	Super-Administrator		
WW-neu	Administrator		
Ä	Administrator		

add/edit user	
username:	
password:	
password (repeat):	
role:	administrator administrator super-administrator

Put different passwords for Administrator and Super Administrator.

Note: The Super Administrator can also perform network settings

file	panel	online	total diagram	digital signals	Consumption	pressure	calculation	service	report	settings	print
------	-------	--------	---------------	-----------------	-------------	----------	-------------	---------	--------	----------	-------

compressor modules	master analog input	analog module	digital signals	general	control	remote control	user	Logout
--------------------	---------------------	---------------	-----------------	---------	---------	----------------	------	--------

manage SD-card

- Format SD-card
- init SD-card
- check / repair SD-card

 data archive

 Refresh reports

 Generate missing reports

 efficiency calculation matrix / general expense table

 Panel Designer

 load-configuration-from-controller

 send-configuration-to-controller (Option Webserver Plus)

 server properties

 Configuration table

 install Java Runtime

 Diagnosis

In the menu, remote control

Available actions:

- Manage SD card
- Format SD card
- Create data archive
- Refresh reports
- Generate missing reports
- Efficiency calculation matrix / general expense table
- Panel Designer
- Server properties
- Configuration table
- Install Java plug-in
- Diagnostics

Server Settings

file	panel	online	total diagram	digital signals	Consumption	pressure	calculation	service	report	settings	print
compressor modules			master analog input	analog module	digital signals	general	control	remote control	user	Logout	

parameter	value
station	E:/online/daten/Albert Hoffmann
data directory	E:/online/daten/Albert Hoffmann select directory
controller IP-adress	
[delete historically configurations] [Delete temp files] [restore configuration]	
Note: press button '+' and 8 simultaneously to set and change IP-adress	
controller port	10050
Download	☒ on ☐ off
reports with average consumption	☐ on ☒ off
Control N°:	2401-13492451
Code:	WEB-SERVER Plus activating
start time report generator	02:00 server time edit...
	[Sync date / time] Offset 0 h
Ampere Messung initialisieren	[initialisieren]
Webserver mode	☒ Control ☐ Measuring [Restore original data]
mailing settings	
mail host	
mail user	
mail password	
mail sender	[MailConfig-Test]
	save application
Software MM Version 4.0 12.08.2012	

In menu „remote control“ - server properties

You can perform the following actions:

- Delete historical configurations
- Delete temp files
- Restore configuration
- WEB-SERVER Plus activating
- Start time report generator
- Init Compressor currentmeasuring
- Mail settings for SMTP Server

Airleader Master Modul 3,003										Seite	Sicherheit	Extras
Datei	Panel	Online	Gesamtdiagram	Dig. Signale	Verbrauch	Druck	Berechnung	Service	Report	Einstellung		
Kompressor Module		Master Analogeingaenge		Analogmodule	Digitale Signale	Allgemein	Steuerung	Fernbedienung				
Benutzer	Logout											

Diagnose

Auf dieser Seite kann bei auftretenden Problemen die Ursache ermittelt werden.
 Sie können von hier aus die Erreichbarkeit der Steuerung testen, die SD Karte in der Steuerung prüfen, die Mailserver-Konfiguration testen, Datumssynchronität zwischen Server und Steuerung ermitteln, sowie das Webserver Logfile einsehen und löschen.

Ping ausführen
 Mit dem Ping auf die Steuerung prüfen Sie die generelle Erreichbarkeit der Steuerung über das Netzwerk.

Diagnostics menu

Available actions:

- Run ping
- Check communication
- Check SD card
- Synchronise date
- Configure mail server
- View log file

Configuration Table 1

control configuration



customer:	DLW 03-2011
type:	MM
controler number:	
software version:	2.603
WebServer:	4.0 (12.06.2012)
IP-address:	192.168.0.100
MAC address:	00.50.C2.72.AB.CB
date:	22.06.2012

compressor	1	2	3	4	5	6
description:	Modul 1	Modul 2	Modul 3	Modul 4	Modul 5	Modul 6
VSD:	no	no	no	no	no	no
m3/min:	16.1 m3/min	16.1 m3/min	7.1 m3/min	7.1 m3/min	16.1 m3/min	13.5 m3/min
Imin / Imax:	-	-	-	-	-	-
reg. range max:	-	-	-	-	-	-
regulation buffer:	-	-	-	-	-	-
flow rate min:	-	-	-	-	-	-
AE1 type of sensor min/max :	current measuring 0.0 - 500.0 (A kW)	current measuring 0.0 - 500.0 (A kW)	current measuring 0.0 - 100.0 (A kW)	current measuring 0.0 - 100.0 (A kW)	current measuring 0.0 - 200.0 (A kW)	-
AE2 type of sensor min/max :	temperature 0.0 - 150.0 (°C mA)	temperature 0.0 - 150.0 (°C mA)	temperature 0.0 - 150.0 (°C mA)	temperature 0.0 - 150.0 (°C mA)	temperature 0.0 - 150.0 (°C mA)	-
AE2 alert min/max :	0.0 - 120.0 (°C A kW)	0.0 - 120.0 (°C A kW)	0.0 - 120.0 (°C A kW)	0.0 - 120.0 (°C A kW)	0.0 - 120.0 (°C A kW)	-
analog output current value min / max:	0.0 - 0.0 mA	0.0 - 0.0 mA	0.0 - 0.0 mA	0.0 - 0.0 mA	0.0 - 0.0 mA	0.0 - 0.0 mA
analog output pressure value min / max:	0.0 - 0.0 bar	0.0 - 0.0 bar	0.0 - 0.0 bar	0.0 - 0.0 bar	0.0 - 0.0 bar	0.0 - 0.0 bar
load kW:	93.0 kW	93.0 kW	38.1 kW	38.1 kW	92.5 kW	83.95 kW
unload kW:	24.1 kW	25.1 kW	10.1 kW	9.65 kW	21.2 kW	46.3 kW
motor kW:	0.0 kW	0.0 kW	0.0 kW	0.0 kW	0.0 kW	0.0 kW
motor V:	400.0 V	400.0 V	400.0 V	400.0 V	400.0 V	400.0 V
load Cos phi:	-0.9	-0.9	-0.9	-0.9	-0.9	-0.9
unload Cos phi:	0.6	0.6	0.6	0.6	0.6	0.6

pressure switch points	pMin	Pmax	PAalarm
DP 01	5.7 bar	6.2 bar	5.0 bar
DP 02	5.0 bar	5.4 bar	4.5 bar
DP 03	4.1 bar	5.1 bar	3.6 bar
DP 04	4.1 bar	5.1 bar	3.6 bar

[illegible]

Configuration Table 2

compressor-sequence time				
compressors	m3/min	hour	minute	
with	16.1	12	00	
compressors	m3/min	hour	minute	
with	7.1	12	00	

control parameter			
delay time	minute	second	
start	0	50	
below	0	30	
high	0	20	
security zone	bar		
below	0.1 bar		
high	0.2 bar		

master analog input	type of sensor	name of device	Min	Max	alert Min	alert Max
AE 1	net pressure		0.0	16.0		
AE 2	flow		0.0	50.0	0.0	50.0
AE 3	flow		0.0	50.0	0.0	50.0
AE 4	flow		0.0	25.0	0.0	25.0

additional modules

clock relay													
SP	day of week							time (h/min)	on/off	DP	RF	R1	R2
01	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday	Sunday	05:00	on	2	2	1	1
	☐	☐	☐	☐	☐	☒	☐						
02	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday	Sunday	00:00	off	2	2	1	1
	☐	☐	☐	☐	☐	☒	☐						
03	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday	Sunday	00:00	on	2	2	1	1
	☐	☐	☐	☐	☐	☐	☒						
04	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday	Sunday	21:00	off	2	2	1	1
	☐	☐	☐	☐	☐	☐	☒						

network properties	
IP-address	192.168.0.100
subnet mask	255.255.255.0
standart gateway	192.168.0.1
MAC address	00.50.C2.72.AB.CB

others	
language	english
VSD Extend	2 (Standard)
price / kWh	0.13 €

alert delay times for	
compressor fault	30 seconds
analog inputs compressor modul	30 seconds
analog inputs controler	30 seconds
analog inputs analogmodul	30 seconds
digital inputs analogmodul	30 seconds

Creating a data archive

Prepare a ZIP file of operating data for a functional check or a support enquiry.

Settings > Remote control > Data archive

1 Choose what to archive

- Archive all data:** include the complete data set.
- Create partial archive:** include only the selected months.

2 Select the months and create the archive

For a partial archive, select one or more months and click **Archive**.

Creating the ZIP file may take some time. When complete, it appears automatically in the archive list.

Archive - Internet Explorer

Select months to archive:

2009-November

2009-October

2009-September

2009-August

2009-July

Archive

Cancel

3 Open or save the ZIP file

Click the completed archive in the archive list.

Open displays the contents of the ZIP file.

Save saves the ZIP file to a folder on your computer.

Attach the saved **ZIP file** to your support email.

File Download

Do you want to open or save this file?

Name: DatenArchiv.zip

Type: Compressed (zipped) Folder

From: 192.168.0.35

Open

Save

Cancel

Always ask before opening this type of file.

Only open or save files from a source you trust.

